

AB 207R SERIES ALTERNATORS

PART NO:	D.E. HSG ASSY QTY 1 [1]	BUSH QTY 1 [2]	SPACER OUTER QTY 1 [11]	STATOR HOUSING QTY 1 [12]	ROTOR ASSY QTY 1 [14]	SP. DOWEL PIN QTY 1 [23]	RECTIFIER ENDSHIELD QTY 1 [25]	SLIDING BUSH QTY 1 [26]	KEY QTY 1 [36]	FAN QTY 1 [37]	INS: BAND QTY 1 [116]	COVER QTY 1 [92]	AIR DUCT ST= STRAIGHT, EL=ELBOW QTY 1 [124]
1283210	6506-5	6506-6	6506-29	6506-3	6332-A1464	-	6506-59A	6506-25	NK1-9	6506-28	6270-133	6506-11	6506-44 [EL]
1283211	6506-5	6506-6	6506-97	6506-3	6332-A1474	-	6506-59A	6506-25	6506-88	6506-86	6270-135	6506-11	6506-44 [EL]
1283212	6506-5	6506-6	6506-97	6506-3	6332-A1474	-	6506-59A	6506-25	6506-88	6506-86	6270-133	6506-99	-
1283220	6506-56	-	6506-29	6506-69	6332-A1464	6257-465J	6506-58A	-	NK 1-9	6506-28	6270-133	6506-11	6506-44 [EL]
1283221	6506-56	-	6506-97	6506-69	6332-A1474	6257-465J	6506-59A	6506-25	6506-88	6506-86	6270-133	6506-11	6506-71 [ST]
1283230	6506-56	-	6506-29	6506-69	6332-A1464	6257-465J	6506-58A	-	NK 1-9	6506-28	6270-133	6506-11	6506-71 [ST]
1283231	6506-56	-	6506-97	6506-69	6332-A1474	6257-465J	6506-59A	6506-25	6506-88	6506-86	6270-133	6506-11	6506-71 [ST]
1283232	6506-56A	-	6506-97	6506-69	6332-A1474	6506-108	6506-59A	6506-25	6506-88	6506-86	6270-135	6506-99	-
1283240	6506-5	6506-6	6506-29	6506-3	6332-A1464	-	6506-59A	6506-25	NK1-9	6506-28	6270-133	6506-11	6506-71 [ST]
1283241	6506-5	6506-6	6506-97	6506-3	6332-A1474	-	6506-59A	6506-25	6506-88	6506-86	6270-135	6506-11	6506-71 [ST]

COMMON PARTS

ITEM NO	PART NO:	QTY	DESCRIPTION	ITEM NO	PART NO:	QTY	DESCRIPTION	ITEM NO	PART NO:	QTY	DESCRIPTION
3	6333-F856	1	FIELD COIL [D.E.]	44	6506-31	1	POSITIVE TERMINAL	85	1861A708	2	REGULATOR [594A-5]
4	5335-963G	9	SKT HD CAPSCREW	45	6500-185	2	INSULATING BUSH	86	5335-963A	6	SKT HD CAPSCREW
5	5293-57	61	SPRING WASHER	46	6506-32A	1	INSULATING BUSH	88	6506-10	1	SUPPORT FRAME
6	6332-A1462	1	STATOR ASSY [D.E.]	47	5936-495N	4	WASHER	90	6506-21	1	TERMINAL BLOCK
7	6506-22	6	STUD [LONG]	48	5001-43	4	SPRING WASHER	91	6245-77A	4	DIODE
9	6500-90	1	SPACER [INNER]	49	NU11-9T1	5	HEX NUT	95	NS200-10Z1	4	SCREW
10	6506-109	1	ROLLER BEARING	50	5936-436G	2	DOWTY WASHER	96	NP1-2	8	SHAKEPROOF WASHER
13	6040-34	2	BRIDGE PIECE	51	5886-242	2	LUBRICATOR	97	5936-495D	8	WASHER
15	6270-180B	1	OIL SEAL	53	6506-30	1	NEGATIVE TERMINAL	98	6506-61	1	CONNECTOR
16	6270-180C	2	OIL SEAL	55	6506-32	1	INSULATING BUSH	105	6506-63	1	LEAD ASSY - WL
17	6270-487	1	BELLEVILLE WASHER	56	5936-482B	1	WASHER	106	6506-64	1	LEAD ASSY - Ao
18	5330-501	1	HEX NUT	57	5001-26	2	SPRING WASHER	107	6506-62	1	LEAD ASSY - AC
19	6220-430	6	TAG	58	NU11-7T1	2	HEX NUT	110	6506-23	6	SPACER
20	6040-35	4	BRIDGE PIECE	65	6506-35A	1	POSITIVE LEAD ASSY	113	6506-34	2	SUPPRESSOR
21	6332-A1463	1	STATOR ASSY [S.R.E.]	66	6506-35B	1	NEGATIVE LEAD ASSY	114	6220-366	10	CABLE TIE
28	6333-F855	1	FIELD COIL [S.R.E.]	67	6506-35C	1	POSITIVE LEAD ASSY	115	6506-83	1	MOULDED FAN
29	5335-963E	3	SKT HD CAPSCREW	68	6506-35D	1	NEGATIVE LEAD ASSY	117	5950-150L	6	SLEEVING
31	6270-54	1	OIL SEAL	69	6270-499	6	HEATSINK	118	6506-68	1	CABLE TIE
32	5335-963H	6	SKT HD CAPSCREW	70	6360-33A	12	POSITIVE DIODE	119	6500-22A	6	INSULATION BUSH
33	5936-495J	6	WASHER	71	6360-33	12	NEGATIVE DIODE	120	6220-141	12	INSULATION WASHER
38	6500-51	1	BEARING - S.R.E.	72	6360-33A	6	AUX DIODE	121	5335-967	1	STUD
39	NM2-13	1	CIRCLIP	73	NU9-10T1	30	DIODE NUT	122	NU12-4Z1	1	NUT
40	6506-17	1	END CAP	76	NS209-6T1	6	SCREW	123	5936-502	1	WASHER
41	6350-105J	1	"O" RING	77	5244-22	6	SPRING WASHER				
42	5335-963D	12	SKT HD CAPSCREW	80	5936-498	6	WASHER				


NOTE 1 - PART NUMBERS 1283212 AND 1283232 HAVE A COMBINED COVER AND STRAIGHT AIR DUCT

NOTE 2 - "O" RING SEAL [ITEM 8], WHEN FITTED, IS NO LONGER REQUIRED,AND MAY BE DISPENSED WITH DURING NORMAL ALTERNATOR SERVICING.

NOTE 3 - AB 207R ALTERNATORS MAY BE CONVERTED TO " SEALED BEARINGS " BY USING CONVERSION KIT, PART NO: 6506-113, AS INDICATED ON THE ATTACHED DRAWING


AB207R ALTERNATOR

95

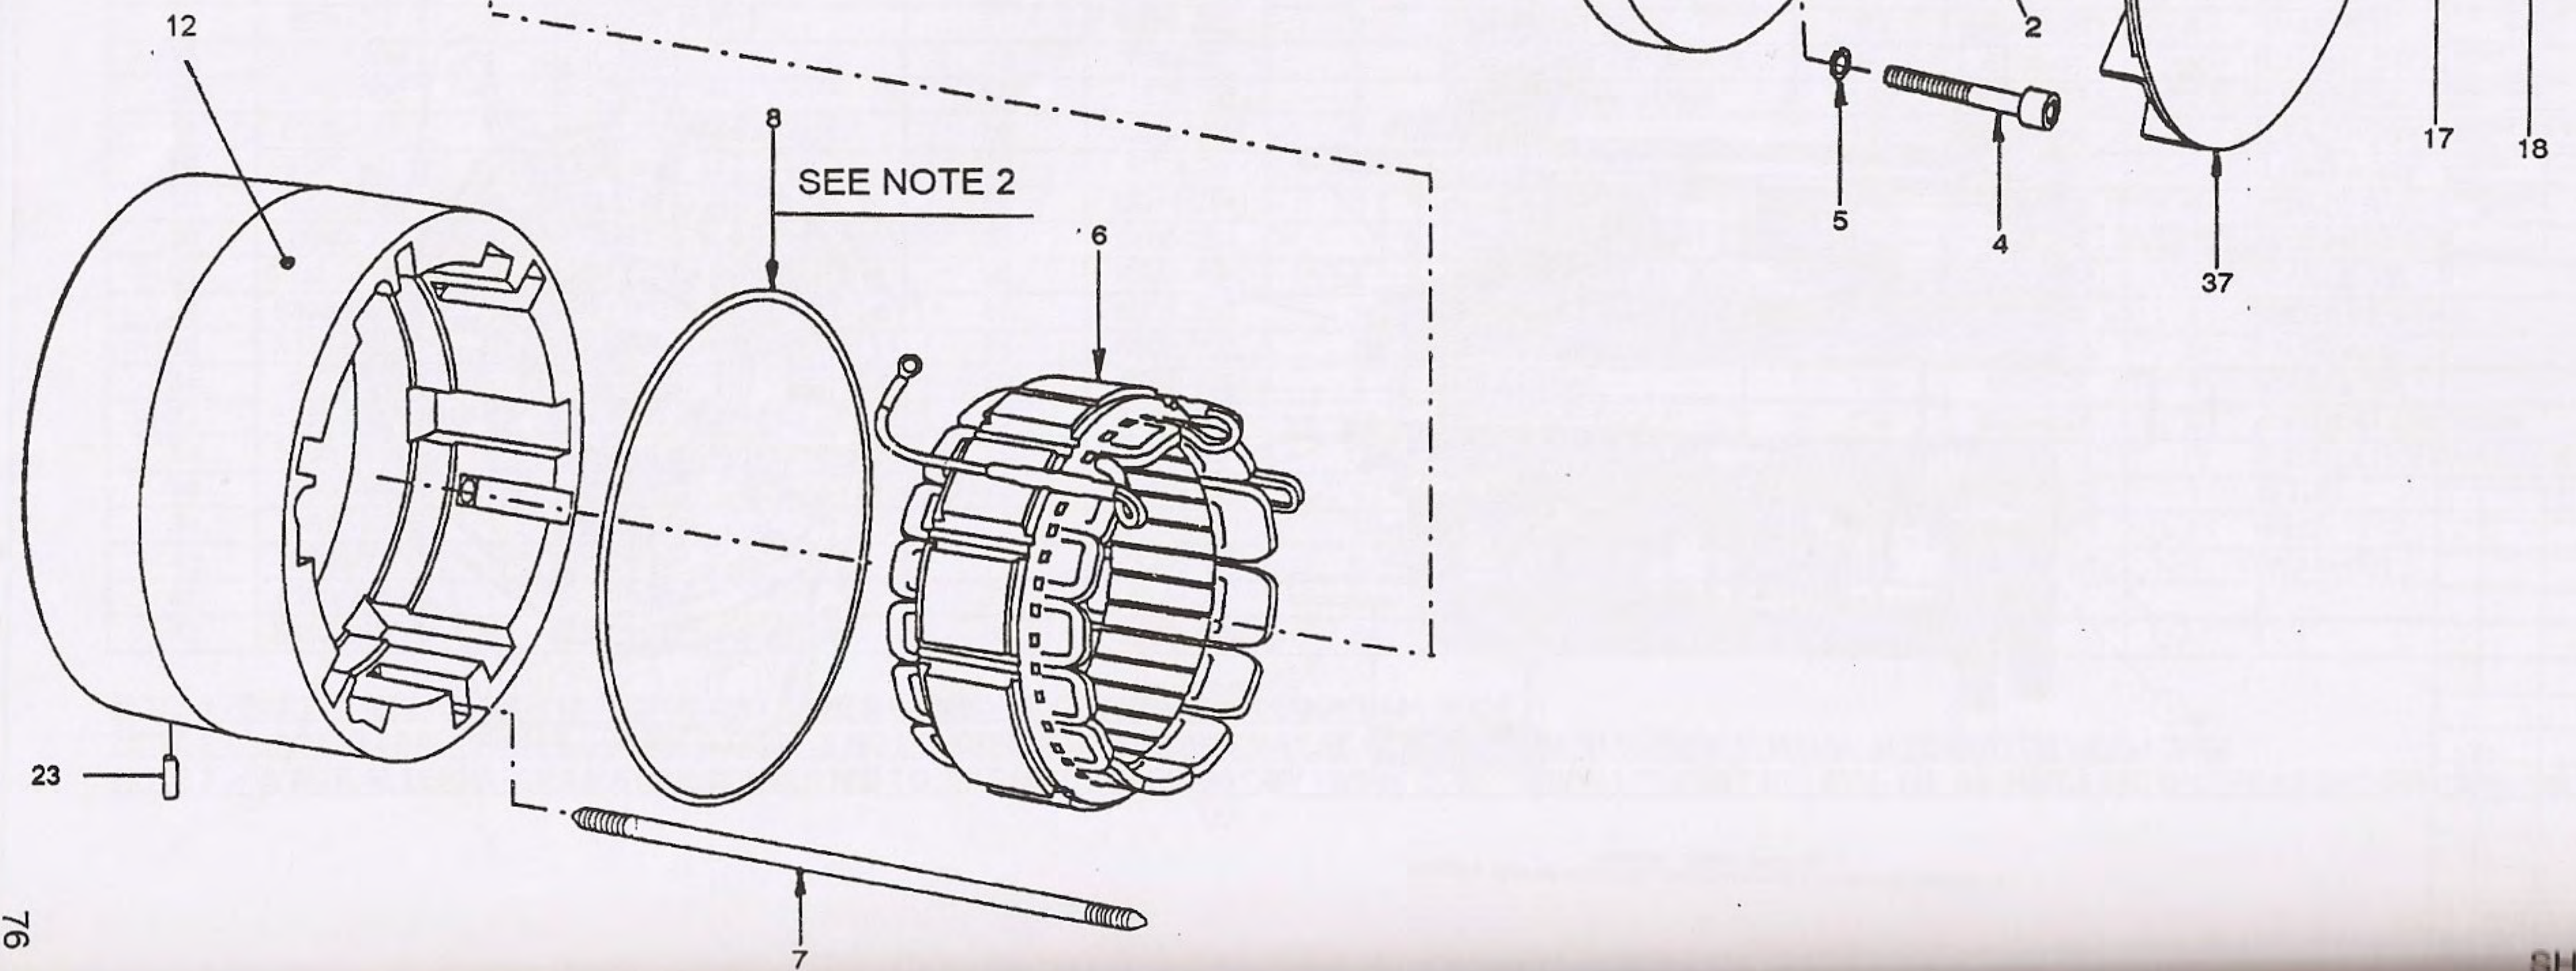

76

AB207R ALTERNATOR

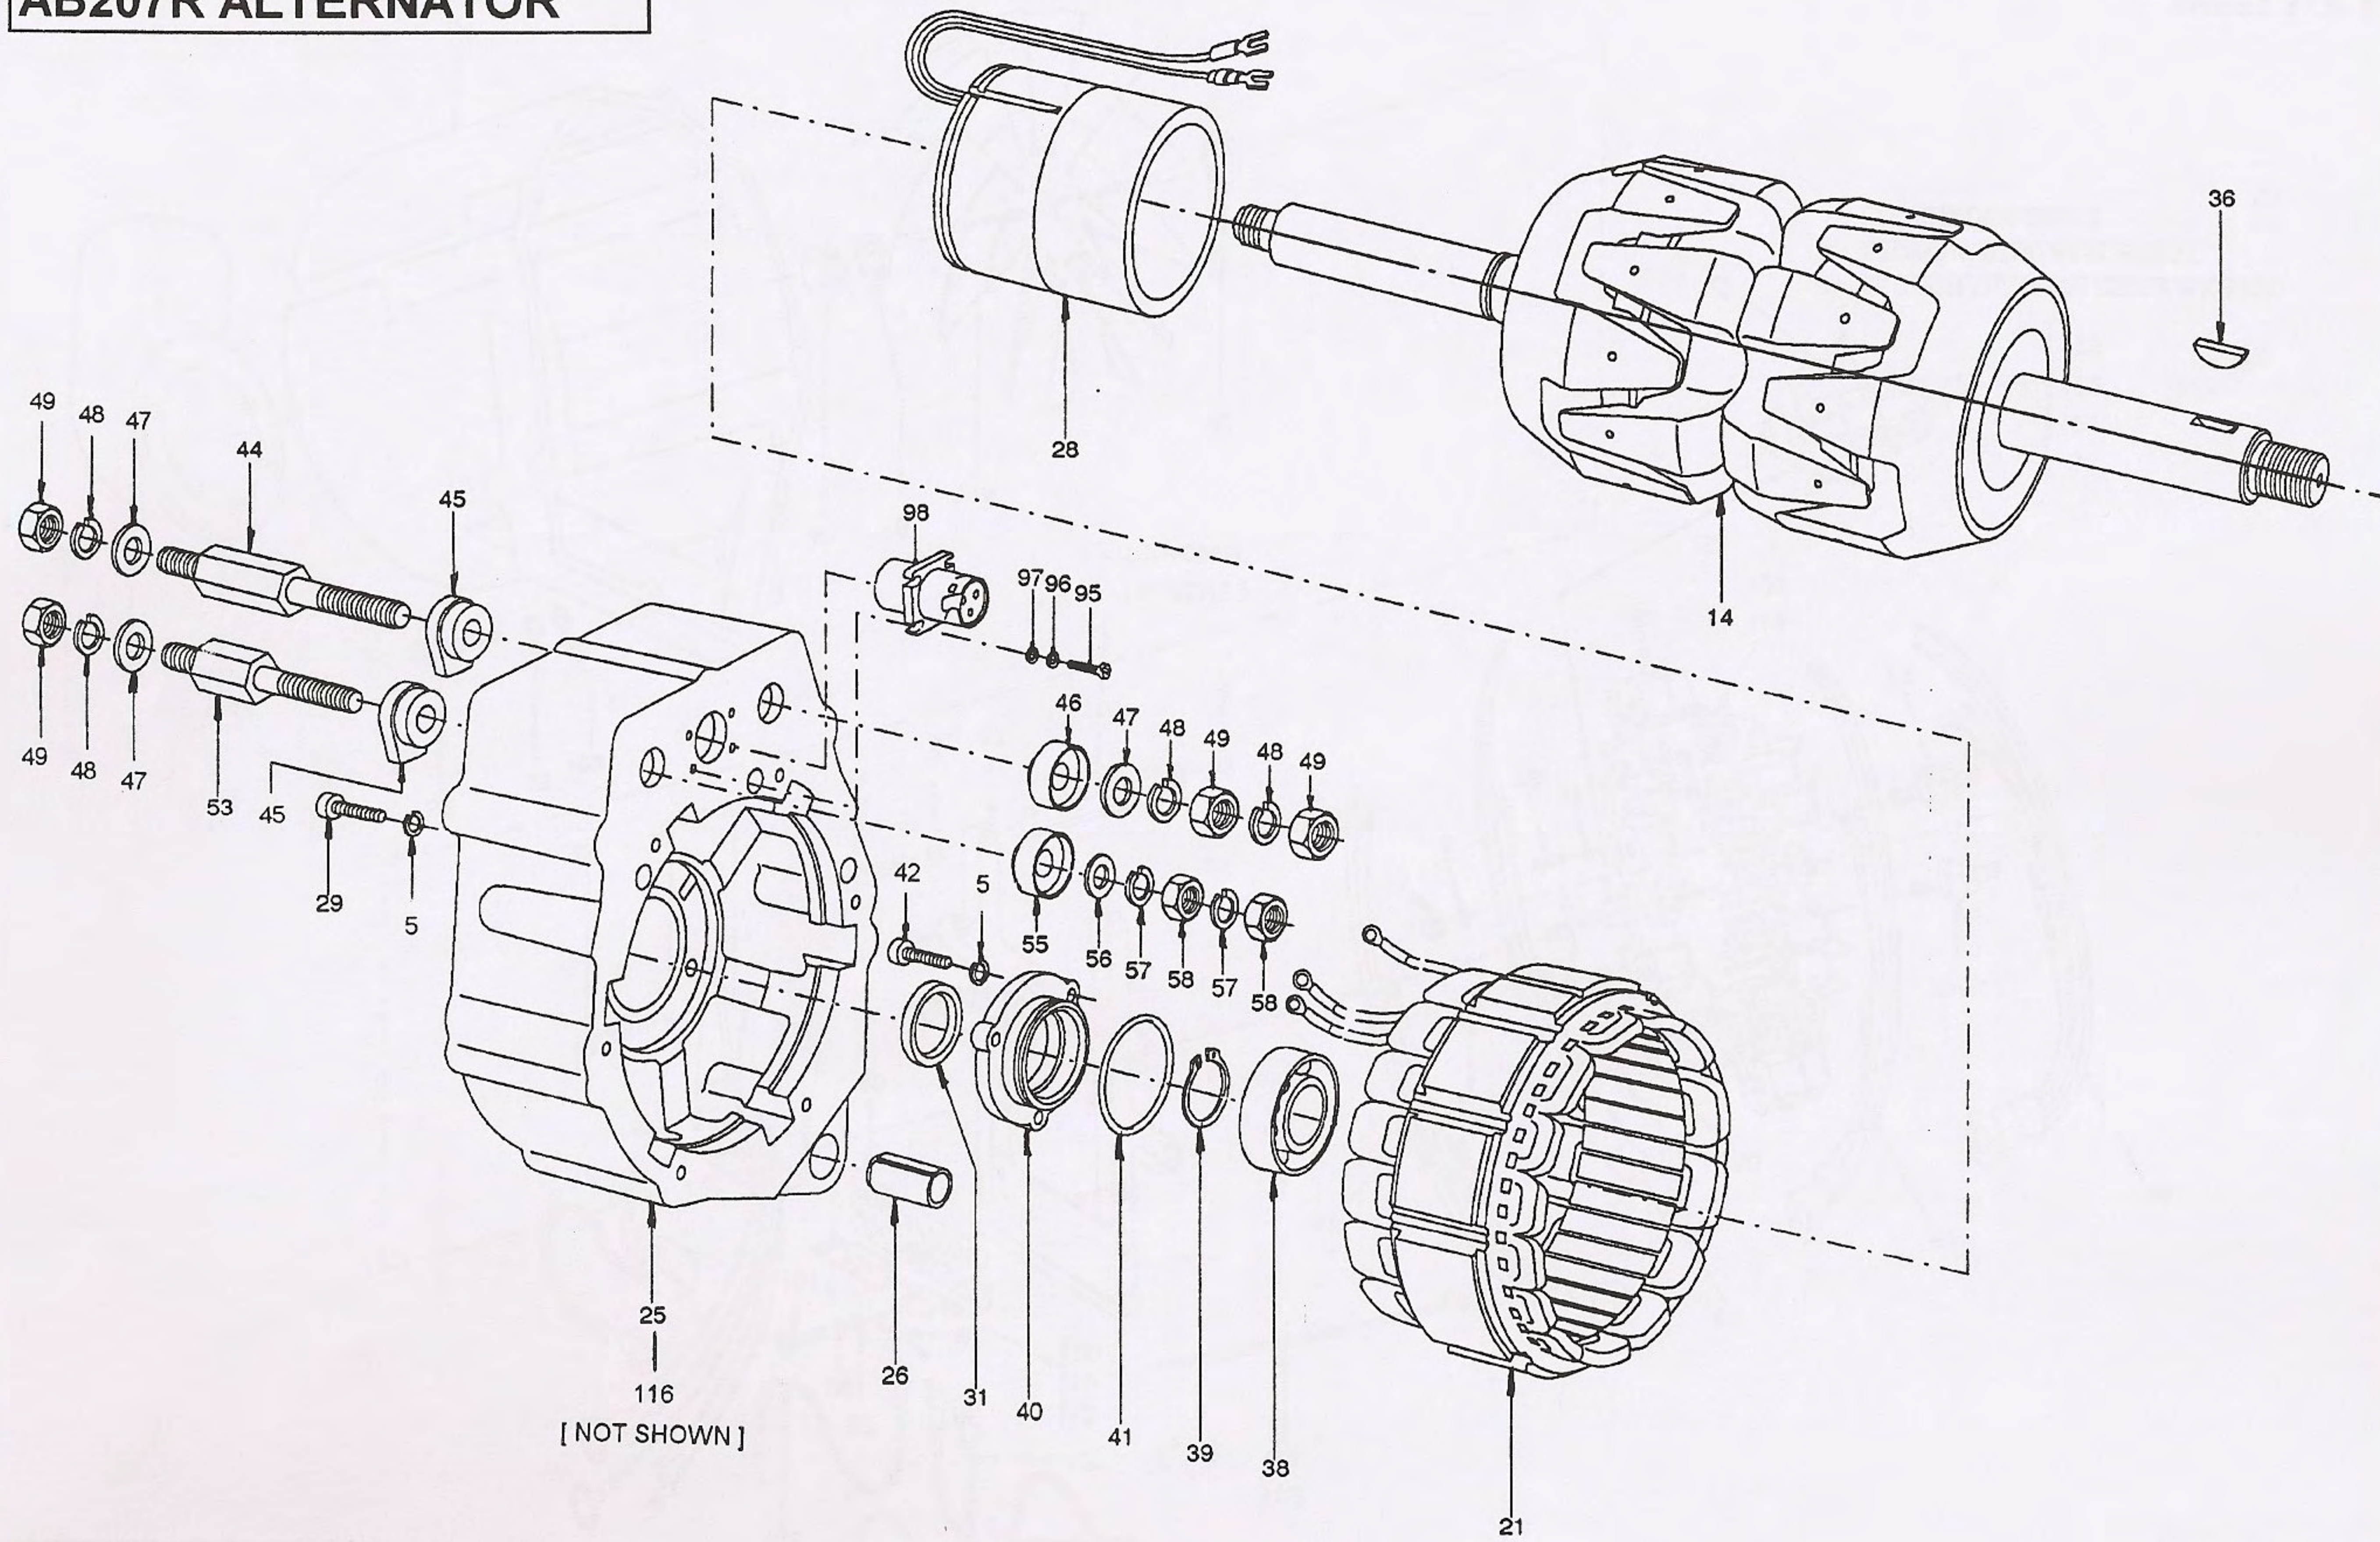

AB207R ALTERNATOR

97

